

# NZ WHEELBARROWS

## TRADESMAN & SUPERTUFF ASSEMBLY INSTRUCTIONS




**NOTE:** Green tipped lighter gauge frame with Supertuff (green bowl),  
Black tipped heavy gauge frame with Tradesman (black bowl).



1. Place the frame on the ground ensuring that the handles are horizontal.




2. Put the two shiny cup head bolts through the holes at the right angled end of the front stays.

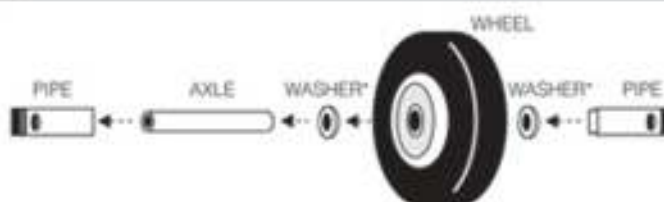

\* WASHERS WITH SUPERTUFF (GREEN) WHEELBARROW ONLY

3. Slide the axle into a square axle block. Slide the wheel onto the axle, followed by the second square axle block.

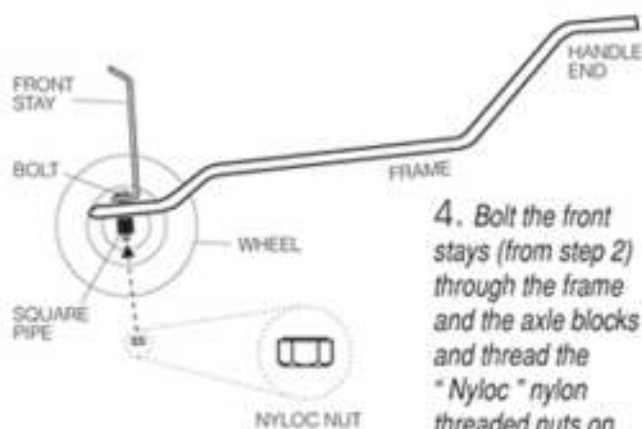


4. Bolt the front stays (from step 2) through the frame and the axle blocks and thread the "Nyloc" nylon threaded nuts on loosely.

5. Place the 2 shorter cup head bolts through the front of the bowl and through the front stays. Attach nuts loosely. The four longer cup head bolts go through the base of the bowl, then frame and finally the legs. Attach nuts loosely.

6. With remaining 4 hex bolts and nuts attach bracing cross bars to the inside of the legs.

BACK VIEW OF WHEELBARROW

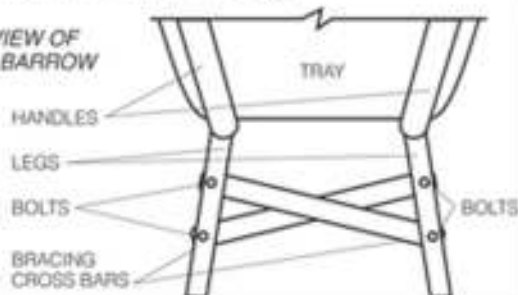

7. Tighten all nuts.

8. Place hand grips in hot water to soften then hammer onto the handles.



The Supertuff and Tradesman are proudly made in New Zealand and have a 5 YEAR\* fix it\* guarantee. This means that in the event of any damage EVERY part is replaceable, please contact us at [nzwheelbarrows@clear.net.nz](mailto:nzwheelbarrows@clear.net.nz) for your nearest parts stockist. Every care is taken to ensure all products are of the highest quality. We thrive on your feedback, please visit our website at [www.nzwheelbarrows.co.nz](http://www.nzwheelbarrows.co.nz)

*Enjoy Your New Wheelbarrow!*